

V 1.0

AM-4 MANUAL



It is important that you read this manual before attempting the installation of your battery. Please take note of certain steps to ensure correct inverter compatibility.

Please visit <https://www.hubblelithium.co.za> for the latest version of this manual.



WARNING:

Working with high voltage systems is dangerous. Do not attempt to modify your inverter and battery setup unless you are certain you understand the risk. Speak to a qualified electrician if you are unsure.

INDEX

AM-4 WIRE DIAGRAM _____ 1

SECTION 1

INSTALLATION _____ 2

MULTIPLE BATTERIES _____ 3

COMMUNICATION PORTS _____ 4

SECTION 2

LED INDICATORS _____ 5

SECTION 3

BMS & MAINTENANCE _____ 6

SECTION 4



COMPLETING SETUP _____ 7



AM-4

WIRE DIAGRAM

1. Cover
2. Hanging Ear
3. Handle
4. Output Terminal
5. Cooling Case
6. Power Switch
7. Communication Interface
8. Reset Switch
9. LED Lights

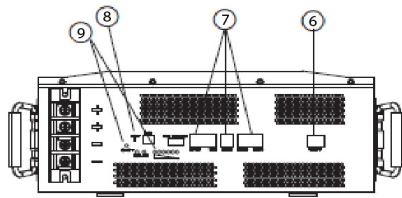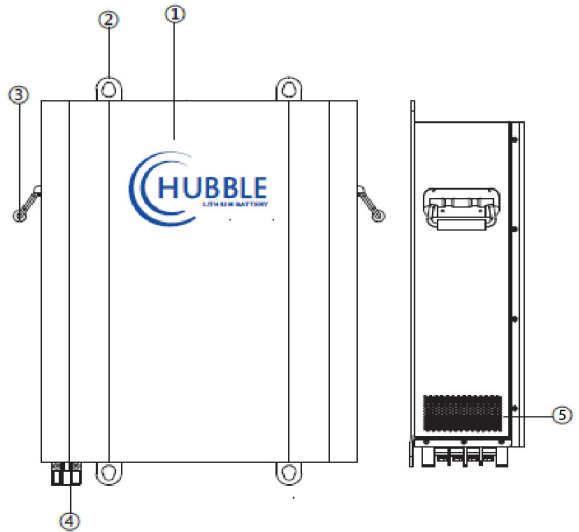

SECTION 1

INSTALLATION

WARNING

This product may only be installed by a qualified electrician. The unit is not designed to be installed upside down or sideways on a wall.

The AM-4 is designed to be wall mounted or installed flat inside a cabinet. The unit is not designed to be installed upside down or sideways on a wall. When installing on a wall ensure you use Rawl bolts to secure the unit onto the wall.

DC ISOLATOR

The Hubble AM series of batteries have an integrated electronic circuit breaker built into the BMS. The integrated electronic CB is for protecting the battery and the internal cells against overload, over current, over volt etc. It is however required to install an external DC fuse or circuit breaker before using or operating the battery. Please ensure you use the correct rating as per battery specification.

DIP SWITCH SETTINGS

Configure each battery address to enable proper setup and communication. Each battery needs a unique serial address in order to communicate. If you are only using 1 battery in your setup, ensure you set the battery to address 1.



| Address | Dip Switch | | | | Remark |
|---------|------------|-----|-----|-----|------------|
| | #1 | #2 | #3 | #4 | |
| 1 | ON | OFF | OFF | OFF | Master |
| 2 | OFF | ON | OFF | OFF | Battery 2 |
| 3 | ON | ON | OFF | OFF | Battery 3 |
| 4 | OFF | OFF | ON | OFF | Battery 4 |
| 5 | ON | OFF | ON | OFF | Battery 5 |
| 6 | OFF | ON | ON | OFF | Battery 6 |
| 7 | ON | ON | ON | OFF | Battery 7 |
| 8 | OFF | OFF | OFF | ON | Battery 8 |
| 9 | ON | OFF | OFF | ON | Battery 9 |
| 10 | OFF | ON | OFF | ON | Battery 10 |
| 11 | ON | ON | OFF | ON | Battery 11 |
| 12 | OFF | OFF | ON | ON | Battery 12 |
| 13 | ON | OFF | ON | ON | Battery 13 |
| 14 | OFF | ON | ON | ON | Battery 14 |
| 15 | ON | ON | ON | ON | Battery 15 |


MULTIPLE BATTERIES

To connect multiple batteries, ensure you use the supplied RJ45 to RJ45 (normal LAN cable) and plug the one end into the master "Battery Link", and the other end into battery #2. Continue this step until all the batteries have been linked up.

Continue to wire up the DC block terminals of each battery to the inverter/charger. Once you have completed the address configuration, inter battery communication links and wired up the DC connections you can proceed to configure the inverter charge settings.

NOTE: BATTERY LINK CABLE

If you do not have a battery link cable or the cable provided is an insufficient length, you can use a standard computer LAN cable to connect each battery. The pin layouts for the ports are the same as the universal LAN cable.

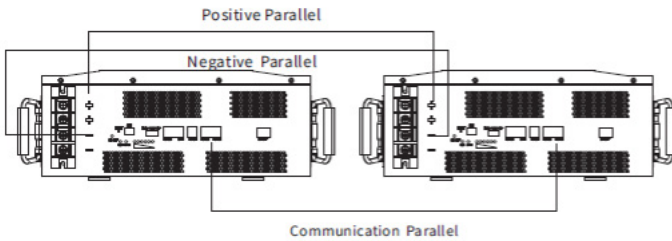

⚠ WARNING: PROTECTION MODE

If your batteries are unbalanced or the voltage of each pack is different by more than 2 Volts DC then your packs will try to inter balance by over 100Amps. This could cause the other batteries in the configuration to Over Current and go into protection mode. If this occurs, charge each pack full individually with the inverter/charger, then switch the other packs on once each has been charged to 100%.

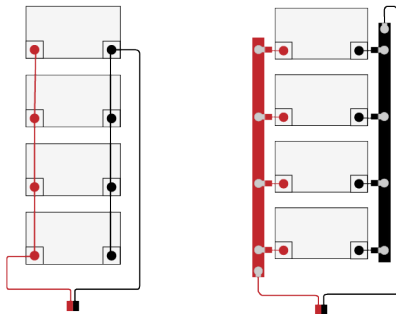


DIAGRAM 1

DIAGRAM 2

CORRECT METHODS OF BATTERY LINKING

Please note the diagrams for the correct method of linking multiple batteries in parallel. Diagram 1, displays a standard linking connection. Diagram 2, displays parallel batteries to which the negatives and positives are connected to common bus bars.

COMMUNICATION



PORTS

CAN Bus Setup (optional)

The The AM series models has an integrated CAN bus port on each battery. The CAN bus can be used to connect to any inverter that is CAN bus ready. The Hubble range of lithium batteries with CAN bus port can integrate with most leading inverters. For more information on CAN bus and compatible inverters see our website at www.hubblelithium.co.za for more information.

To connect the CAN bus cable from the battery to the inverter, ensure you have the correct pin layout. The below is the pin configuration that the Hubble battery CAN bus port uses. Ensure you have the pin out for the cable required for your inverter.

| PIN Number | CAN Pin |
|------------|---------|
| 1 | - |
| 2 | GROUND |
| 3 | - |
| 4 | CAN H |
| 5 | CAN L |
| 6 | - |
| 7 | - |
| 8 | - |

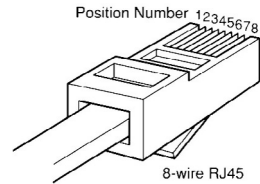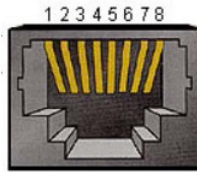

RS232 COMMUNICATION PORT

The RS232 interface is used to connect to the Cloudlink device or the port is reserved for technical support to interface directly through a service laptop and access the BMS for programming and troubleshooting.



WARNING: FIRE HAZARD & WARRANTY VOID DO NOT CONNECT THIRD PARTY DEVICE

It is strictly forbidden to access or interfere directly with the battery BMS through third party devices such as monitoring devices or logging devices that are not Hubble Lithium products. Third party monitoring and interfacing devices have the potential to change charge voltages and algorithms inadvertently - this can cause a catastrophic fire hazard. Therefore, interfacing to the BMS directly without authorization will void the warranty and Hubble Lithium will not be liable for any resulting damages.

OPTIONAL CLOUDLINK DEVICE

The Hubble Cloudlink is an optional add-on to the Hubble X and AM range of products. As long as the device is connected to Wi-Fi it will cloud, all battery and inverter data to our cloud-server, enabling users to remotely monitor their power system.



Learn more about the Hubble Cloudlink here:

<https://www.hubblelithium.co.za/hubble-cloudlink.html>

Access the latest Cloudlink Setup Guide here:

<https://www.hubblelithium.co.za/cloudlink-setup.html>

SECTION 2

LED INDICATORS

LED OPERATION STATUS

| Status | Normal / Alarm / Protection | RUN | ALM | SOC Indication LEDs | | | | Remark |
|-----------|---|---------|---------|--|-----|-----|-----|---|
| | | ● | ● | ● | ● | ● | ● | |
| Power Off | Sleep | OFF | OFF | OFF | OFF | OFF | OFF | All off |
| Standby | Normal | Flash 1 | OFF | Indication by SOC | | | | Standby state |
| | Alarm | Flash 1 | Flash 3 | | | | | Cell low voltage |
| Charge | Normal | ON | OFF | Indication by SOC (The top SOC Led Flash 2) | | | | ALM Led OFF when Cell over-charge voltage Alarm |
| | Alarm | ON | Flash 3 | | | | | |
| | Over Charge Protection | ON | OFF | ON | ON | ON | ON | If no mains supply, LED as standby |
| | Temperature/Over-current Fault Protection | OFF | ON | OFF | OFF | OFF | OFF | |
| Discharge | Normal | Flash3 | OFF | Indication by SOC | | | | |
| | Alarm | Flash3 | Flash 3 | | | | | |
| | Under Discharge Protection | OFF | OFF | OFF | OFF | OFF | OFF | |
| | Temperature Alarm or Over-current Alarm or Short Circuit Protection | OFF | ON | OFF | OFF | OFF | OFF | |
| | Fault | OFF | ON | OFF | OFF | OFF | OFF | |


LED FLASH STATUS

When battery is turned on you can reset the BMS operation mode to default to clear a temporary alarm status. Push the switch for 6 seconds, the BMS will reset. LEDs will flash one at the same.

| FLASH | ON | OFF |
|---------|--------|--------|
| Flash 1 | 0.25 S | 3.75 S |
| Flash 2 | 0.5 S | 0.5 S |
| Flash 3 | 0.5 S | 1.5 S |

SECTION 3

BMS & MAINTENANCE

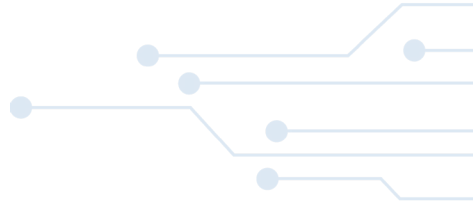

BMS LOW POWER MODE

The Hubble BMS will enter low power mode if the following conditions happen:

1. When over-discharge protection has occurred. (30S later).
2. When all cell-voltage is less than the Sleep voltage parameter setting to prevent complete cell/ battery drain.
3. Standby time is more than 24 hours (without charge and discharge current, without balance, without protection and fault).

BMS EMC SAFETY

ESD:

Complies with Level 4 of GB/T 17626.2-2006 (EN55024): 8KV at contact and 15KV at air. Normal operation after test.

ELECTROMAGNETIC CONDUCTION:

Complies with Lever A of YD/T 983-1998 (EN55022).

ELECTROMAGNETIC RADIATION:

Complies with Lever A of YD/T 983-1998 (EN55022).

INRUSH:

Complies with GB/T 17626.5-2008 (EN6100-4-2).

DATA STORAGE

The Hubble BMS has a built-in alarm and event data storage memory. Alarms and events are recorded as, occurrence time, fault categories, over/under cell voltage, pack voltage, charge/discharge capacity, charge/discharge current, temperature, etc. This can be downloaded by a service technician to help troubleshoot any issues or problems of the battery.

MAINTENANCE

The Hubble BMS will protect the battery and life of your battery as best possible. However, it must be noted that proper operation of the battery is recommended, and maintenance functions should be taken to ensure the maximum life of your batteries.

Cell balancing is a very important function of the lifespan of your battery. It is important to ensure the cell balancing functions are properly performed. The Hubble BMS cell balancer will only activate upon 100% state of charge when the batteries near full charge. Thus, it is critical that a full charge to the batteries are provided at least once every 7 (seven) days, but preferably daily upon a charge cycle. Enough charge time should be provided to balance the cells until the BMS completely stops taking charge from the inverter. Cell cycle life cannot be guaranteed if balancing is not performed on a regular basis. This is especially important in complete off grid systems where a stable power supply is not available.

SECTION 4

COMPLETING SETUP

CONGRATULATIONS!

Once all the above steps have been completed you can proceed to follow the start-up instructions given by your inverter manufacturer.

If you have any difficulties with setting up your system, please contact our Technical Support Department via support@hubblelithium.co.za. Be sure to include the following information in your initial email so that we can provide you with timely assistance:

1. Inverter make & model
2. Model & number of connected batteries
3. Are your batteries in Series or Parallel?
4. A brief description of your system and any issues you may be having
5. If possible; images of your power system
6. Contact Details, if we should need to contact you



**FOR MORE
INFORMATION AND
UPDATES PLEASE
VIEW OUR WEBSITE:**

www.hubblelithium.co.za